



*RICHIE VAS / Maxum Team
MMA Bantamweight Champion
& Big Wave Surfer*

Instruction Manual / *Vantage*

MAXUM

Maxum watches are 100 - 200 metres water resistant, and feature stainless steel construction with a 5 year limited warranty on stainless steel watches & 3 year warranty on digital.

 
Designed and developed in Australia for Australian surf conditions, Maxum combines function, form and style to create durable, contemporary products that are designed to embrace the Australian surf lifestyle.

Note: Please refer to the 'WATER RESISTANCE GUIDE' and the 'WATCH CARE AND PRECAUTIONS' for more information.

MAXUM VANTAGE



REGULAR DISPLAY AND BUTTON OPERATION

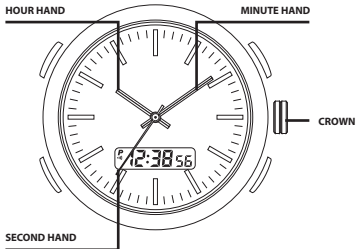

BUTTON OVERVIEW

MODE button (M)

- To select the display among Local Time, Calendar, Chronograph, Timer Modes and Alarm Mode.
- In setting display: To exit the setting mode.

START/STOP button (S/S)

- To start or stop Chronograph / Timer running.
- In setting Display: To increase the setting value.

SELECT button (SEL)

- To take a Split time when the Chronograph running.
- In Local Time/ Alarm/ Calendar Mode: Hold down the button to enter the setting display.
- In setting display: To select among different settings.
- In Timer Mode: To preset countdown time when the timer stopped.

LIGHT Button (EL)

- To turn on the EL backlight for 3 seconds.



NOTE: Check the coming chapters for the detailed operations.

 
SETTING ANALOGUE WATCH



How to set the Analogue (M)

- To set time, gently pull out the crown to the 'click' position.
- Then turn the crown either clockwise or counter clockwise until the time is set correctly.
- When the time is set, gently push the crown back to its original position to resume normal operation.

MAJOR FUNCTION DISPLAY

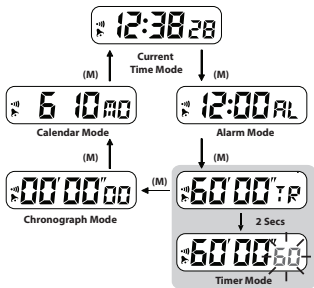

CURRENT TIME MODE - BASIC FUNCTIONS



Local Time Mode

- This mode will display the current time.
- To set the time, hold down the (SEL) button to go to the setting display.

 
What is Chime function?

- User will hear a 'BEEP, BEEP' sound in each hour when chime function is ON.

Setting of Chime function

- Under Current Time Mode, Press (SEL) and (S/S) together to turn it ON or OFF.
- When chime function in ON, "🔔" will be shown in the display and will hear 2 beeps sound.

CURRENT TIME MODE - SETTING

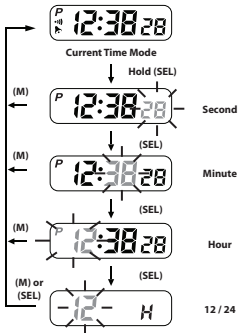


How to do the settings

- Hold down the (SEL) button in the Local Time Mode to select the setting display:
- In the setting display, press the (SEL) button to move flashing following the right diagram.
- When the setting is selected, press (S/S) to change the setting value (hold down the button to change the setting faster).

NOTE:

- When the setting is completed, press the (M) button to exit the setting display.
- If there is no key stroke for 1 minute, it will exit the setting mode automatically.

 ALARM MODE AND SETTING

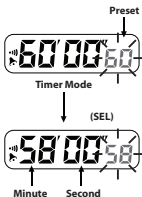


Countdown Timer

- The watch includes a countdown timer: Timer Mode.
- The Timer starts counting from a preset value to zero and stops at zero.


Setting of Timer function

- Enter Timer mode
- When minute is flashing, press the (SEL) button to decrease the setting value (hold down the button to decrease the setting value faster).

 TIMER MODE - START / STOP THE TIMER

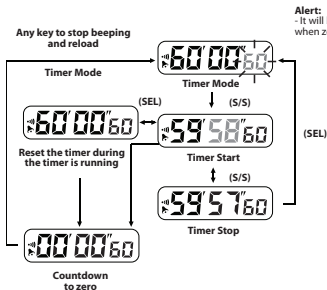

CHRONOGRAPH MODE

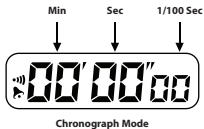 

Chronograph Mode

 
- This watch includes a stopwatch function which measures elapsed time and current split time.
- The measuring capacity of the chronograph:
 - Measuring unit: 1/100 second,
 - Measuring range: 59 minutes and 59.99 seconds

Chronograph Display

When the Chronograph Display is selected, the Watch will show the following items on the display:

- Min
- Sec
- 1/100 Sec

CHRONOGRAPH MODE - USING THE CHRONOGRAPH

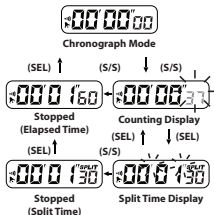

How to Measure Elapsed Time

- During the 'All Zero' Display, press the (S/S) button once will start the counting, and press the (S/S) button again will stop the counting.

 
How to get a Split Time

When the chronograph is counting, press the (SEL) button to record Split Time.

How to reset the Chronograph

Press (SEL) button to reset the display to 'All Zero' Display when the chronograph is stopped counting.

CALENDAR MODE

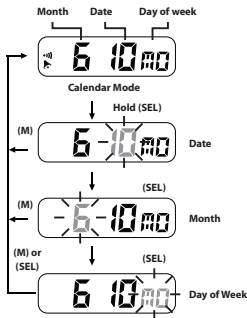

Calendar Mode

- This mode will display the month, date and day of week.
- To set the calendar, hold down the (SEL) button to go to the setting display.

How to do the setting

- In the setting display, press the (SEL) button to move flashing following the right diagram.
- When the setting is selected, press (S/S) to change the setting (hold down the button to change the setting faster).

POWER SAVING MODE



CURRENT TIME MODE

PRESS ANY
BUTTON

↑ ↓

HOLD
(M) + (S/S)



POWER SAVING MODE

Power Saving Mode

- Manual Power Saving Function - you can turn ON/OFF the LCD display manually.
- In Current time mode, hold (M) and (S/S) button and the release.
- LCD will turn OFF immediately.
- To exit the Power Saving Mode, just press any key and the LCD display will be resumed.

NOTE: Even the LCD display is OFF, the timekeeping function is still running normally in Power Saving Mode.

SPECIFICATIONS

Timekeeping (Analogue)

- Time System: Quartz movement.
- Hands: 3 hands (Hour, Minute and Second)

Timekeeping (Digital)

- Time Display: AM/PM, Hour, Minute, Second.
- Date Display: Month, Day and Day of the week display
- Time Format: 12-hour or 24-hour format selectable.
- Hourly Chime

Alarm Mode

- 1 daily alarm

Chronograph Mode

- Resolution: 1/100
- Measuring Range: 59 minutes 59.99 seconds

Timer Mode

- Resolution: 1 second
- Range: 60 mins - 1 min

Back Light

- Electro - Luminescent

CARE OF YOUR WATCH

1. This watch contains precise electronic components.
2. Never to open the case or remove the back cover.
3. Do not operate buttons while underwater, or while swimming or diving.
4. Should water or condensation appear in the watch, immediately have the watch checked by Designa Accessories. Water can corrode electronic parts inside the case.
5. Avoid severe impact: The watch is designed to with stand impact under normal use. Do not subject it to severe impact or rough usage, and do not drop it onto hard surfaces.
6. Avoid exposing the watch to extreme temperatures.
7. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
8. Keep your watch away from strong electric field and static electricity.

FEATURES AND SPECIFICATIONS

1. Standard display mode:
 - Hours, Minutes, Seconds, Day of the Week, Date, Month, Year.
2. Function:
 - Month, Date AM/PM and Electro-Luminescent light.
 - Alarm OFF/ON
 - World Time.
 - Text Display
 - 12/24 hour format switch option.





HANDLING OF WATER RESISTANT WATCHES

Water resistancy of your watch is greatly affected by the way the watch is treated – misuse will diminish water resistancy by affecting the case and lens seals.

- Although the watch is warranted to the specifications marked, all care should be taken to avoid damage that results from mishandling.
- Should your watch have a screw down crown, you must ensure that the screw lock crown is completely tightened at all times.
- If the watch comes into contact with salt or chlorinated water, be sure to rinse it thoroughly in fresh water.
- If a watch is wet, do not store it in a closed container. It should be dried out immediately to avoid damage to internal components.
- Should water or condensation appear in the watch, immediately have it serviced by those listed on your warranty as water can corrode components.

- Pressure in bar (ATM) is a test pressure. This measurement should not be considered as actual immersion depth, as various conditions in beach surf may cause false pressure conditions.
- The dial marking indicated (ATM, M or BAR) represents the tested pressure.



MAXUM WATCH CARE AND PRECAUTIONS

- Avoid leaving your watch in extreme weather for long periods of time: direct sunlight, extremely warm or cold conditions.
- Only use your watch for approved sports as detailed in the 'WATER RESISTANCY USAGE GUIDE' (Avoid wet conditions unless your watch is suited for them).
- Never operate the buttons or crown when the watch is wet or submerged in water.
- Light activities will not affect your watch, but drops or hits against a hard surface will cause damage, not only to the lens, case and band but to the internal components.
- Do not expose the watch to solvents, mercury, cosmetic spray (eg. Hairspray and perfume), detergents, adhesives, paints, gases or other chemicals. They may cause discolouration and deterioration to the finish of the watch.

- Do not under any circumstances wear your watch in a hot tub, sauna, shower or bath. The combination of extreme heat and water may cause your watch to lose its water resistancy.
- Ensure that watches marked as water resistant are thoroughly rinsed in fresh water after use in salt and/or chlorinated water and dried with a soft cloth.
- The watch and bracelet/band may collect dust and perspiration and will become soiled if not cleaned regularly. This is particularly the case with the inner parts of the links or mesh of the bracelet. Wipe periodically with a soft dry cloth.
- No backward hand or date adjustments should be made with analogue hands between 8pm and 3am. At these times, the gears are too close together and such a change could cause damage. Eg. Daylight savings time.
- Avoid fastening the bracelet too tightly. You should be able to insert a finger between the band and the wrist (make sure the wrist is at normal temperature and not overheated).

- Do not clean watch with spray cleaners, thinners or other such volatile agents.
- Never try to open the watch. Only have batteries changed by Designa Accessories technicians.
- Avoid exposing your watch to extreme temperatures
- Should moisture appear inside the watch, have it checked by Designa Accessories technicians.
- Avoid magnetic fields as they may effect the time keeping of your watch.



MAXUM WATER - WATER RESISTANCE

Maxum watches are tested to the highest industry standards for water resistance.

Note: All industry standard watch testing is done in a static laboratory environment and relates to pressure. It does not signify a specific diving depth (see 'WATER RESISTANCY USAGE GUIDE' for more information).

WATER RESISTANCY USAGE GUIDE

INDICATION			
DIAL MARKING	DESCRIPTION	SPLASHES OR RAIN ETC	SWIM 0
10ATM or 100m or BAR	100m WATER RESISTANT	YES	
20ATM or 200m or BAR	200m WATER RESISTANT	YES	

Due to the fact that Surfing and Fishing are in no way static sports there are influences that can affect a watch's ability to keep water out. For example, frequent temperature changes, salt water and big wipe-outs can diminish the longevity of the watch's rubber seals.

To keep your watch in peak condition for surfing/fishing, we recommend that you have your watch seals replaced and fully tested at the Designa Accessories Service Centre every 24 months (see Warranty Book for contact details).

* Water resistant casing does not permit pusher or button operation while in water.

WATER RELATED USE			
MAIN	SWIMMING, SURFING OR CAR WASH	SCUBA DIVING	SHOWER/BATH ETC
	YES	NO	NO
	YES	YES	NO

LIMITED WARRANTY ON ALL MAXUM WATCHES

Your Maxum watch is guaranteed for a period (3 years for all Plasma Watches and 5 years for all Waverider or Core Watches) from the date of purchase against all defects in material or workmanship. This does not apply to normal wear and tear or abuse of components and watch finish or plating (see 'WATCH CARE AND PRECAUTIONS') and does not cover water damage caused by non-compliance with the water resistancy guide in the Maxum Operations Manual found at **www.maxum.com.au**

The following applies to Australian Residents ONLY:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or a refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This mandatory warranty applies in respect of all goods purchased after the 31st of December 2011.



TO MAKE A CLAIM:

This warranty is issued by DA Designa Accessories Pty Limited ABN 53 003 084 893 of PO Box 2576, Taren Point NSW 2229, telephone (02) 8543 4600. To make a claim under warranty given by Designa you must send the goods in appropriate packaging together with proof of purchase to Designa at the address stated above. You must bear the expense of making a claim under any such warranty. Any warranty given by Designa is in addition to other rights and remedies which you have as a consumer under law in relation to the goods or services to which the warranty relates.

For this warranty to be valid, it must be dated at the time of purchase and stamped by the retailer.

Any other warranty given by your retailer is entirely under their responsibility and the terms of this warranty cannot be changed by any person.

The following parts ARE covered by the Maxum limited warranty:

3YR Warranty (Plasma Watches):

1. Batteries - 1 YEAR
2. Bands/Straps - 1 YEAR
3. Water resistancy - 2 YEARS
4. Movement - 3 YEARS

5YR Warranty (Waverider/Core Watches):

1. Batteries - 1 YEAR
2. Bands/Straps - 1 YEAR
3. Water resistancy - 2 YEARS
4. Movement - 5 YEARS

The following parts ARE NOT covered by the Maxum 3YR or 5YR limited warranty:

1. Clasp
2. Bezel
3. Case damage, scratching or breakage
4. Lens breakage, scratching or damage
5. Water leakage if the screw-in-crown is not activated
6. General wear and tear, scratches

In the event of a malfunction, return the watch and your warranty to:

AUSTRALIA:

DESIGNA ACCESSORIES

PO BOX 2576

TAREN POINT NSW 2229

AUSTRALIA

Ph: 1800 800 030

Email: customer.service@designa.com.au

NEW ZEALAND:

DESIGNA ACCESSORIES

P.O BOX 99313

NEWMARKET AUCKLAND 1146

Ph: 649 531 4190

LIMITED WARRANTY REPAIR COUPON

Please tick your watch type:

- ☐ 3YR - PLASMA WATCH OR
☐ 5YR - WAVERIDER/ CORE WATCH

NAME.....

ADDRESS.....

CITY.....

POSTCODE.....

PHONE.....

WATCH STYLE NO.....

DATE PURCHASED.....

RETAILER PURCHASED FROM:



www.maxum.com.au