

MAXUM

S23 RANGE



 MAXUM

S23 NEWNESS
RANGE





PRINCE - \$249.00
MW23100G01



PRINCE - \$249.00
MW23100G02



PRINCE - \$299.00
MW23100G03



PRINCE - \$199.00
MW23100G04



PRINCE - \$199.00
MW23100G05



PRINCE - \$249.00
MW23100G06



LIBERTY - \$249.00
MW23200L01



LIBERTY - \$249.00
MW23200L02



LIBERTY - \$199.00
MW23200L05



LIBERTY - \$299.00
MW23200L03



LIBERTY - \$299.00
MW23200L04



LIBERTY - \$249.00
MW23200L07



LIBERTY - \$199.00
MW23200L06



LIBERTY - \$249.00
MW23200L08



LANSDOWNE - \$279.00
MW23102G01



LANSDOWNE - \$299.00
MW23102G02



LANSDOWNE - \$299.00
MW23102G03



LANSDOWNE - \$229.00
MW23102G04



LANSDOWNE - \$249.00
MW23102G05



LANSDOWNE - \$249.00
MW23102G06



RAGLAN - \$349.00
MW23104G01



RAGLAN - \$349.00
MW23104G02



RAGLAN - \$349.00
MW23104G03



RAGLAN - \$299.00
MW23104G04



RAGLAN - \$299.00
MW23104G05



RAGLAN - \$299.00
MW23104G06



RAGLAN - \$299.00
MW23104G07



RAGLAN - \$299.00
MW23104G08



RAGLAN - \$299.00
MW23104G09



RAGLAN - \$299.00
MW23104G10



RAGLAN - \$299.00
MW23104G11



RAGLAN - \$299.00
MW23104G12



MAXUM

S23 CARRYOVER RANGE





PIONEER - \$99
X2221G1



SWING - \$99
X2214L1



NOMAD - \$99
X2212L1



CONQUEST - \$119
X2213G1



ENDURANCE - \$99
X2316G3



ENDURANCE - \$99
X2316G2





BUTTON - \$99
X2276L1



BUTTON - \$99
X1676L1



SWING - \$99
X9101L2



CONQUEST - \$119
X2013G2



BRAVE - \$99
X2224G1



MAVERICK - \$119
X2001G1



EXPLORER - \$99
X2223G2



EXPLORER - \$99
X2223G1



CONQUEST - \$119
X2013G1



SURFARI - \$99
X1706L1



MAVERICK - \$119
X2001G2



MINI BULK - \$119
X2122G1



BULK - \$149
X1720G2



MAVERICK - \$149
X2001G3



AVOCA - \$99
X1411L2



MINIMAX - \$99
X1807L2



MINIMAX - \$99
X1807L1



MINIMAX MARK 2 - \$99
X2007L1



CANDY - \$99
X2213L2



CANDY - \$99
X2213L3



CANDY - \$99
X2213L1



SWING - \$99
X2114L1



AVOCA - \$99
X2111L1



AVOCA - \$99
X2111L2



Customer Service Enquiries

'Designa Accessories' has its own in-house customer service centre to help you and your customers with all enquiries relating to the service and repair of all 'DA' products.

Monday-Friday from 9.00am – 4.00pm

AUS OFFICE: T +61 2 8543 4600

E customer.service@designa.com.au
or srepairs@designa.com.au

NZ OFFICE: T +64 9 480 2211

E customer.service@designaaccessories.co.nz

Spare part orders can be placed via email (see listed on left).

All links orders incur a charge. New sale, first two links \$10. Additional links \$10 each. Please contact us for further information on the price and availability of links.

Any expenses incurred in sending the watch to Designa Accessories are at owner's expense.

The Terms of the Warranty

Your Maxum watch is guaranteed for a period (2 years for all Digital and Ana-Digital Watches and 5 years for all Analogue Watches) from the date of purchase against all defects in material or workmanship. This does not apply to normal wear and tear or abuse of components and watch finish or plating (see 'WATCH CARE AND PRECAUTIONS') and does not cover water damage caused by non-compliance with the water resistancy usage guide in the Maxum Operations Manual found at maxum.com.au

The following applies to Australian Purchases ONLY:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or a refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure (the Mandatory Provision).

The following parts **ARE** covered by the Maxum limited warranty:

2 YEAR Limited Warranty (Digital and Ana-Digital Watches):

- Batteries - 1 YEAR
- Movement - 2 YEARS

5 YEAR Warranty (Analogue Watches):

- Batteries - 1 YEAR
- Movement - 5 YEARS

The following parts **ARE NOT** covered by the Maxum 2 Year or 5 Year limited warranty:

1. Band, strap or clasp
2. Case, hands, dial or lens damage, scratches or breakage
3. Water leakage if the screw-in-crown is not activated or the water resistancy guidelines have not been followed.
4. General wear and tear, finish or plating of the watch or any defects arising from misuse or any other use which is not in accordance

with the Recommended Watch care and Precautions.

In addition, this warranty does not cover issues from any alteration, service or repair performed by any party other than the Designa Accessories authorised service centre.

Head to maxum.com.au for further information, or to download our service & repair form. In the event of a malfunction, return the watch, your warranty and proof of purchase carefully packaged and registered to:

Please do not send in original packaging as it will not be returned. Any expenses incurred in sending the watch to Designa Accessories are at the owner's expense.

AUSTRALIA:

DESIGNA ACCESSORIES / PO BOX 2576 / TAREN POINT NSW 2229 / AUSTRALIA / Ph: +61 2 8543 4600

Email: customer.service@designa.com.au

NEW ZEALAND:

DESIGNA ACCESSORIES / PO BOX 119313 / NEWMARKET AUCKLAND 1149 / Ph: +64 9 480 2211


Email: customer.service@designaaccessories.co.nz

WATER RESISTANCY USAGE GUIDE

INDICATION		WATER-RELATED USE				
DIAL MARKING	DESCRIPTION	SPLASH OR RAIN ETC	SWIMMING OR CAR WASH	DIVING OR SNORKELING	SCUBA DIVING	SHOWER OR SAUNA
-	DUST RESISTANT*	NO	NO	NO	NO	NO
3ATM or 30m or BAR	WATER RESISTANT**	YES	NO	NO	NO	NO
5ATM or 50m or BAR	50m WATER RESISTANT**	YES	YES	NO	NO	NO
10ATM or 100m or BAR	100m WATER RESISTANT**	YES	YES	YES	NO	NO
20ATM or 2000m or BAR	200m WATER RESISTANT**	YES	YES	YES	YES	NO

* No caseback marking indicates watch is dust resistant only & the wearer must not get watch wet.

** Water resistant casing does not permit pusher or button operation while in water.



WARNING

- Contains button or coin cell battery
- Hazardous if swallowed or placed inside any part of the body
- This product should only be serviced by an authorised technician

WARNING - KEEP BUTTON BATTERIES OUT OF REACH OF CHILDREN

- Swallowing may lead to serious or fatal injury in as little as 2 hours due to chemical burns and the perforation of the oesophagus or digestive system.
- Never allow children to replace batteries on any device.
- If you suspect your child has swallowed or inserted a button battery, immediately call the 24-hour Poisons Information Centre on 13 11 26 (Australia) or 0800 764 766 (New Zealand) for fast expert advice.
- Regularly examine devices and make sure the battery compartment is correctly secured.
- Dispose of used button batteries immediately and safely out of the reach of children.
- A battery can still be dangerous even when it can no longer operate the device.
- Tell others about the risk associated with the button batteries and how to keep their children safe.

D E S I G N A

ACCESSORIES ————— EST. 1986

Telephone **+61 2 8543 4600**
Email **sales.orders@designa.com.au**
designaaccessories.com.au